




FOR IMMEDIATE RELEASE

Steril-Aire

Contact: Jeff Scheir
jeff@steril-aire.com
(818) 565-1128

November 20, 2017
Burbank, California

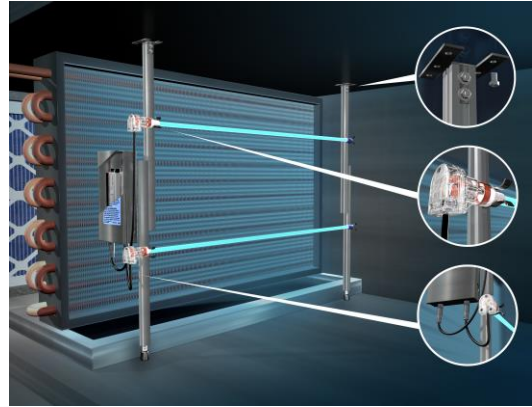

STERIL-AIRE'S RAPID INSTALL KIT (RIK) MAKES HIGH PERFORMANCE UVC FOR HVAC™ SYSTEMS EASIER TO INSTALL

Steril-Aire's Rapid Install Kit brings ease of installation to the company's line of high-performance UVC for HVAC™ systems. The Rapid Install Kit (RIK) is packaged at the factory with all the necessary components, pre-wired for faster, simpler installation and replacement.

Sturdy brackets and adjustable columns install in AHU's with coil plenums up to 180" in height. Each RIK can span up to 61" in width. RIK utilizes Steril-Aire Enhanced Single Ended Emitters® with moisture-resistant IP67-compliant connectors, to minimize the potential of water damage from moisture intrusion. Emitter cables plug in to the power supply enclosure. Each enclosure is pre-wired and mounted. Any configuration of the RIK requires only one single external electrical connection. Installation cost and HVAC downtime are thus reduced significantly.

According to third party studies available from Steril-Aire, the company's Emitters (lamps) generate the highest sustained output over time compared to any UVC for HVAC lamp in the industry. Steril-Aire Emitters deliver sustained germicidal action, eliminating biofilm continuously over their 9,000-hour service life.